

# IMPORTANT NOTICE


2005 - Up, GM Vehicles equipped with (RVC) Remote Voltage Control

## Charge wiring kit installation instructions

**Your factory positive charge wire must remain in place**

Your new upgraded red charge wire should be installed on top of the original factory charge wire

The Fuse block must be installed within 24in of the front battery

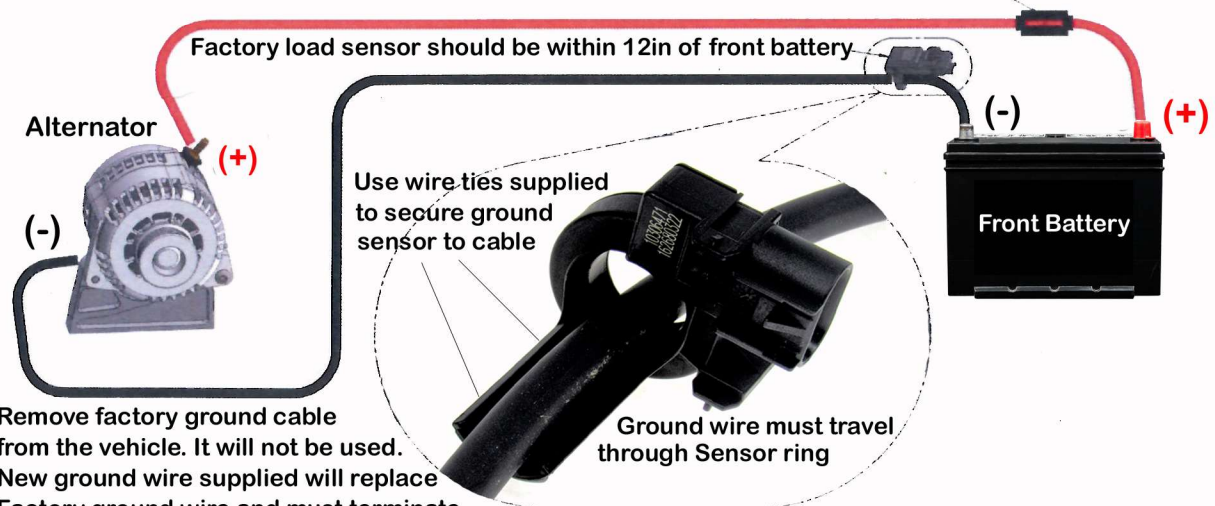

Remove factory ground cable from the vehicle. It will not be used. New ground wire supplied will replace Factory ground wire and must terminate to the alternator ground bolt instead of the block

**Your factory ground sensor wire must be removed and replaced with the new upgraded black ground wire we supply in the kit**

If you have any technical questions  
please call and ask for our

**Technical Department 1.520.622.7395**